



FLOWSTOP 515 DECON MAT



Flowstop's quick, easy, portable and minimum storage space is ideal for DECON procedures in the field

EACH FLOWSTOP 515 DECON MAT COMES STANDARD WITH:

- (1) 50 GALLON WHEEL TOTE
- (1) 12' X 20' HI-VIS YELLOW ACID & HYDROCARBON RESISTANT TARP
- (1) 5' X 15' POLYETHYLENE COLOR CODED DECON MAT
- (2) 15 GALLON CAPACITY STANDING GRATES
- (24) ABSORBENT PADS
- (12) 5' X 5" ABSORBENT BOOMS
- (4) 5" X 10' ABSORBENT BOOMS
- (1) SCRUB BRUSH
- (2) 50 GALLON POLY BAGS (FOR MATERIAL DISPOSAL)




- 50 Gallon Capacity
- Water and Dust Seal
- Keyed Lock with Metal Latches
- 8 inch All Terrain Wheels

**For restock of Absorbent Booms and Pads, contact Flowstop: 877-356-9767
Or email at: pbeaty@flowstop.com**

Set up procedure for Flowstop's 515 DECON Mat

Place 12' x 20' yellow tarp on smooth, level surface

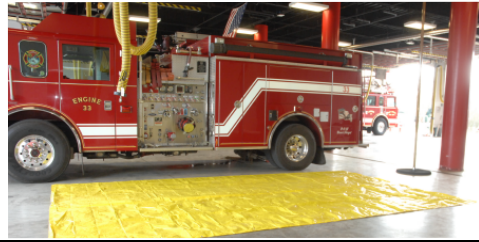

Place colored coded DECON Mat in center of yellow tarp



Position absorbent booms to be installed inside sleeves of inner wall of DECON Mat



Install absorbent booms inside mat sleeves



Absorbent booms installed in mat sleeves



Completed and ready for Decon

